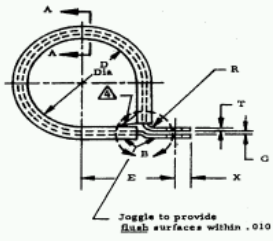


The transition from MS21919 to AS21919 cushion clamp is shown in the table below:

MS21919 vs. AS21919

															
MS21919								AS21919							
	Hole Dia	Width		G - Thickness		Dim X	Cushion Thickness ± .010		Hole Dia	Width		G - Thickness		Dim X	Cushion Thickness ± .010
		Alum	CRES/Stl	Alum	CRES/Stl					Alum	CRES/Stl	Alum	CRES/Stl		
-1	.204	.375	.375	.020	.020	.188	.050		.223	.500	.500	.020	.020	.219	.050
-2	.204	.500	.375	.032	.032	.219	.050		.223	.500	.500	.032	.032	.219	.050
-3	.204	.500	.375	.032	.032	.219	.050		.223	.500	.500	.032	.032	.219	.050
-4	.204	.500	.375	.032	.032	.219	.050		.223	.500	.500	.032	.032	.219	.050
-5	.204	.500	.375	.032	.032	.219	.050		.223	.500	.500	.032	.032	.219	.050
-6	.204	.500	.375	.032	.032	.219	.050		.223	.500	.500	.032	.032	.219	.050
-7	.204	.500	.375	.032	.032	.219	.050		.223	.500	.500	.032	.032	.219	.050
-8	.204	.500	.375	.032	.032	.219	.050		.223	.500	.500	.032	.032	.219	.050
-9	.204	.500	.500	.050	.032	.219	.050		.223	.500	.500	.050	.050	.219	.050
-10	.204	.500	.500	.050	.032	.219	.050		.223	.500	.500	.050	.050	.219	.050
-11	.204	.500	.500	.050	.032	.219	.050		.223	.500	.500	.050	.050	.219	.070
-12	.204	.500	.500	.050	.032	.219	.050		.223	.500	.500	.050	.050	.219	.070
-13	.204	.500	.500	.050	.032	.219	.050		.223	.500	.500	.050	.050	.219	.070
-14	.204	.500	.500	.050	.032	.219	.050		.223	.500	.500	.050	.050	.219	.070

The areas highlighted show the differences in hole sizes and dimensions.